

Installation Instructions for 82283 Spring Adjuster for Quarter Turn Fasteners

This tool allows adjustment of the tension on quarter turn fastener springs when they are too tight or too loose. The spring should already be riveted to its bracket on the vehicle when making adjustments. Insert the tool from the outside edge and turn the knob to bend the spring to reduce the tension when the quarter turn fastener is installed. Insert the tool from the back side (where there is clearance) and tighten the handle to bend the spring to make the quarter turn fastener fit tighter.



1-800-345-4545 jeps.com