

## ***Installation Instructions for 555-63013 & 555-63015 Replacement Check Valve***

1. Using assembly lube or equal product applied to the inside of the rubber grommet push in the plastic check valve.

