

Installation Instructions for 10556 Sealed Change-Over Relay

Switches current one user to another – opening to closing power window or two-stage fans. Use wire gauge & fuse listed by Components Manufacturer. Connector has 12 Gauge leads.

Wiring Diagram Connections:

- #85 to Ground
- #86 to Switch
- #30 to (+) Battery
- #87 to Component Being Turned On/Off
- #87a to Component Being Turned On/Off
 - a) If used as Normally Closed Relay do not use #87 circuit. Normally Closed Relay interrupts current – disconnects circuit for a short time such as a radio when engine is being started.
 - b) If used as a Normally Open Relay do not use #87a circuit. Normally Open relay closes allowing current to pass thru such as vehicle lighting, horns or fan motors.

