

Installation Instructions for 15410 Injector Spacer

- 1.** Remove air cleaner and spacer ring.
- 2.** Remove wiring connectors from injectors.
- 3.** Remove fuel lines and both fuel nut fittings from the rear of the TBI unit.
- 4.** Remove the 3 screws from the injector housing. Torx size T-20.
- 5.** Remove the injector housing and gasket from main body. No gasket is necessary. You may throw away the old gasket.
- 6.** Install injector spacer and injector housing by bolting it back down to main body by using the 3 socket head cap screws supplied. Use green lock tight on screws and torque to 8 in-lbs.
- 7.** Re-install fuel nut fittings and lines in rear of TBI unit.
DO NOT OVER TORQUE.
- 8.** Re-install spacer ring and air cleaner.
Important: Before starting engine, turn key on and check for fuel leaks at lines and fittings.

