

Installation Instructions for 80038 3.5 Ton Steel Floor Jack

HYDRAULIC FLOOR JACK

1. PUT THE JACK ON A CLEAR, OPEN AREA SUCH AS GARAGE FLOOR
 2. TWIST THE HANDLE COUNTERCLOCKWISE ABOUT 90 DEGREE.
 3. PUMP THE HANDLE ABOUT 5 TIMES
 4. TWIST THE BREATHING SCREW(PLEASE SEE THE ATTACHED PICS) COUNTERCLOCKWISE ABOUT 90 DEGREE WITH A SLOTTED SCREWDRIVER.
 5. WAIT FOR ABOUT 5 SECONDS, THEN FIX THE BREATHING SCREW BY TWISTING IT COMPLETELY CLOCKWISE.
- BLEEDING THE JACK COMPLETED.**

WARNING: NEVER TWIST THE HANDLE COUNTERCLOCKWISE COMPLETELY IT MAY CAUSE PERMANENT DAMAGE TO THE JACK.

3.5TON HYDRAULIC FLOOR JACK



BREATHING SCREW