

Installation Instructions for 80893 Portable Variable Speed Blower Fan Heater Attachment

1. Unplug Blower.
2. With the Heaters open rectangular cut-out facing upward, slide the Heater onto the top of the Blower (near the handle). The cut-out locks over the ridged plastic piece on the top of the Blower.
3. Close clasp under Heater.
4. With Heater in place, plug the Heater into the receptacle on the side of the Blower (near handle).
5. Plug in the Blower.
6. Turn the Heaters rocker switch ON to turn on Heater.
7. The heater will only produce heat when air is moving through it. The Red indicator on the Heater should be on during operation.
8. When finished, turn Heater OFF.



1-800-345-4545 jeps.com