



'04-07 5.4L F150 3V 80mm Throttle Body Part #1759

INSTALLATION INSTRUCTIONS

ATTENTION!

All BBK throttle bodies are pre adjusted and tested during assembly. If you have any problems with this throttle body call our Tech Support hot line at (951)296-1771 or e-mail: tech@bbkperformance.com.

DO NOT ATTEMPT TO MAKE ANY ADJUSTMENTS.

TOOLS REQUIRED

1/4" Ratchet

1/4" Extension

8mm socket & 10mm deep socket

T-20 Torx

Needle nose pliers

5mm Allen wrench

STEP 1 Disconnect negative battery terminal. If these instructions are followed closely, this will prevent the CHECK ENGINE light from coming on after the installation.

STEP 2 Unplug the mass air meter by sliding the red colored locking clip back, and then squeezing the tab on the wiring connector while pulling it away from the air box.

STEP 3 Disconnect the PCV tube by gently twisting the green locking tab and pulling the tube away from the air box.

STEP 4 Remove the 4 bolts that attach the air filter box to the intake manifold and the 1 bolt that attaches it to the bracket near the power steering reservoir. Lift the box up away from the throttle body, and pull the tube away from the fender wall. Remove the air box from the vehicle.

STEP 5 Unplug the throttle body electric motor and TPS by sliding the red colored locking clips back, and then squeezing the tabs on each wiring connector while pulling them from their connections.

STEP 6 Unbolt and remove the throttle body **Note; be careful not to damage the throttle body motor housing as you will be re-using it.**

STEP 7 Using the T-20 Torx remove the motor housing, plastic capped spring, and TPS from the stock throttle body. Note: plastic capped spring will be under tension load. You will be re-loading the spring in STEP 11. When removing the TPS, lift it straight up off of the throttle body. Do not twist or rotate the TPS

STEP 8 Pop the removable circular cap off of the motor housing (**this is easily done with a finger**)

STEP 9 Place the plastic capped spring over the end of the throttle shaft of the BBK throttle body and line the pigtail hook on the spring up with the catch slot in the gear.

STEP 10 Install the motor housing minus the removable cap onto the BBK throttle body over the plastic spring cap and tighten screws.

STEP 11 Using needle nosed pliers rotate the plastic spring cap **COUNTER CLOCKWISE (approximately 180°)** until the 2 tabs line up with their matching landings in the motor housing, then gently pull up on the cap until it pops up into a latched position.

STEP 12 Align the tabs on the removable cap with the slots on the motor housing and snap it into place.

STEP 13 Install the TPS onto the BBK throttle body by lining up the locating tab and tightening the screws. **The TPS does not need to be rotated or "clocked"**.

STEP 14 Check the throttle body for smooth action by opening and closing the flap a few times with your fingers. You should feel a slight drag from the electric motor, but it should never bind up or stick.

STEP 15 Install the throttle body onto the intake manifold using the 4 supplied screws, then re-establish the wiring connections.

MORE ON
THE BACK






STEP 9



STEP 11

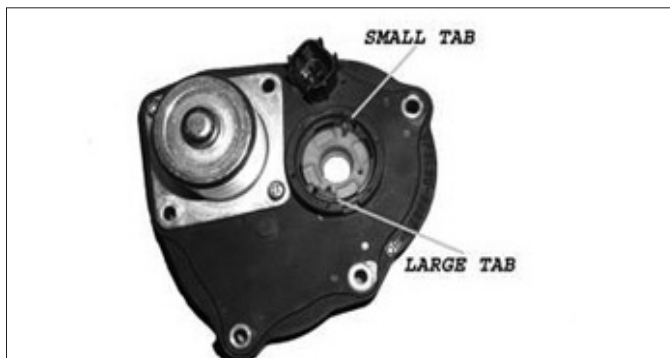

STEP 11