



CSR PERFORMANCE PRODUCTS

16936 County Road 252

McAlpin, Florida 32062

Orders 800-226-1274

Tech. 386-776-1476

Fax 386-776-1638

Email: tech@csr-performance.com

www.csr-performance.com

INSTALLATION INSTRUCTIONS FOR FLEXPLATE SHIELD PART# 835

Note:

Due to the various vendors of transmission cases, trimming the case and tabs may be necessary. On some models the dipstick tube may need to be relocated just to the right with a small bracket. (The dipstick tube goes over the shield).

1. Remove the four top bell-housing bolts.
2. Make sure the bushings are in the shield
3. Install the Flexplate Shield and the metal retainer on the outside of the shield using the four bolts provided. Tighten securely with a 5/16" allen wrench.



CAUTION

**DO NOT CUT OR
ALTER THIS SHIELD**