56133 DODGE DURANGO

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

IDEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filetée.

3/16/2011

English

1. Open the rear hatch. On both sides of the vehicle remove the taillights by removing the two plastic fasteners holding each in place (A).

2. On the driver side behind the taillight locate the vehicle's tailight wiring harness connectors (B). The connectors will be similar to those on the T-Connector harness. Separate the connectors taking care not to damage the locking tabs (C). Route the T-Connector end with the yellow wire up through the opening under driver side taillight. Insert the T-Connector end with the yellow wire between the separated connectors (D). Make sure the connectors are fully inserted with locking tabs in place.

3. Repeat Step 2 on the passenger side using the T-Connector end with the green wire.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using eyelet and screw provided.

5. Secure the 4-flat to the center of the vehicle in a convenient out of the way location. Secure any loose wires with the cable ties provided.

6. Re-install all items remove during install

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813





