

INSTALLATION INSTRUCTIONS ECONO-COOL DUAL CIRCUIT REMOTE COOLER PART # 15230

Please read these instructions completely before starting the installation.				
KIT CONTENTS	TOOLS NEEDED			
QTY. DESCRIPTION1Oil Cooler Assembly2-8AN Female x 3/8" Hose Barb Adapter (Derale #98201)2-8AN Female x 1/2" Hose Barb Adapter (Derale #98202)	or 5/16" N	Screw Driver Nut Driver cket & Ratchet	Open End Wrench's Teflon Tape Razor Knife	Marker Drill 9/32" Drill Bit
RECOMMENDED FOR			IMPORTANT	
TransmissionPower SteeringEngine OilFuel			nto the 1/2" hose barbs , d help prevent binding.	ab the end of the
 PRE-INSTALLATION Important: The Electric Fan comes from the factory with a p check the product label to confirm airflow direction & positive This fan is factory setup for PULLER applications Changing airflow direction To change the airflow direction from the factory setting: 1. Using a 7/16" Socket & Ratchet, remove the four 1/4-2 nuts holding the Electric Fan onto the Oil Cooler Assen 2. Remove the Nut or Clip that holds the electric fan blade the motor shaft. 3. Carefully remove the fan blade from the motor shaft. Note: This is an interference fit and requires some effort. 4. Flip the fan blade upside down and reinstall onto the m shaft. Make sure the roll pin on the motor shaft is align the slot on the fan blade. 5. Reinstall nut or clip on motor shaft. 6. Reinstall the Electric Fan onto the Oil Cooler Assembly 	e electric fa 0 lock nbly. e onto notor ed with	el installed on o in lead color. Air Diagram #	flow direction will be show	Before installation wn with an arrow.
 <u>COOLER LOCATION</u> The purpose of a remote mount cooler is to be able to mount th cooler away from the front of the vehicle therefore not blocking airflow to the radiator/condenser. This cooler can be mounted anywhere space permits. Always keep in mind that the cooler still needs access to airflow to perform at its peak. <u>COOLER INSTALLATION</u> (MOUNTING HARDWARE NOT INCL The Oil Cooler Assembly was manufactured with AN fittings. Inclin this kit are four adapter fittings which allow the AN fitting to be converted to hose barb. (See Diagram #1) Hold the Oil Cooler Assembly in the desired location. Using a marker, mark the four hole locations. Using a drill and 9/32" drill bit, drill the four mounting holes. 		Diagram # Cooler Core # Cooler Cooler		
 4. Using 1/4"-20 Bolts, 1/4" Washers & 1/4" Lock Nuts (Not Supplied) attach the Oil Cooler Assembly. ROUTING HOSES Note: The Cooler is designed with two separate cores of differnt size. One core has two passes and the other with four passes. Provided the kit are (2) 1/2" Barb Fittings, ideal for engine and some transmission use, and (2) 3/8" Barb Fittings ideal for most transmission power steering and fuel line use. (See Diagram #2 for inlet designations) Warning: When routing hoses, be sure to keep all hoses away from sharp edges, moving parts and hot engine components. Hoses shour routed carefully and should not be bent in less than a 5" radius. (Hoses not included) Important: A kinked hose will restrict flow and could cause failure. 				
<u>WIRING</u> (See Diagram #3) Specifications- Electric Fan rating: 4.8 Amps Important: Before beginning reference the Product Label on the Electric Fan shroud for the factory PULLER fan configuration Positive wire color. If you wish to configure the fan opposite of the factory PULLER setting, The Positive (+) and Negative (-) wires MUST be switched. Hook the Positive (+) wire to a switched 12 volt source (Manual Switch or Thermostat).			Diagram #3	Ground
Hook the Negative (-) wire to a good chassis Ground (-). Warning: Installation of accessories should only be undertaken by those with mechanical knowledge and are familiar with working on vehicles. Always use eye protection (goggles, safety glasses or shield). Park the vehicle in a well lit area, on level ground and apply the parking brake. Only work on a cold vehicle that has been sitting overnight, failure to do so will result in severe burns and injury. Before starti the vehicle, make sure no tools or any other items are left under hood that could interfere with or be drawn into moving parts of the engine. Failure to follow instructions can lead to severe damage and personal injury. Derale Performance, Los Angeles, CA • 800.421.6288 • www.derale.com				