

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E

When using these valve springs, part number 99848, on late model Vortec cylinder heads, the inner damper must be removed to prevent a coil bind situation, unless the heads are machined to reduce the spring seat inside diameter to .785"

5/00

512E