




ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

**2010–08 128i, 135i MR3 except Convertible,
2010–07 328i except Convertible**

When removing the old door lock actuator, save the threaded tapping screws that are on the OE. Before installing the new door lock actuator, use the thread tapping screws from the OE to tap the part while it is outside of the car. The thread tapping screws should be tapped at the locations indicated.

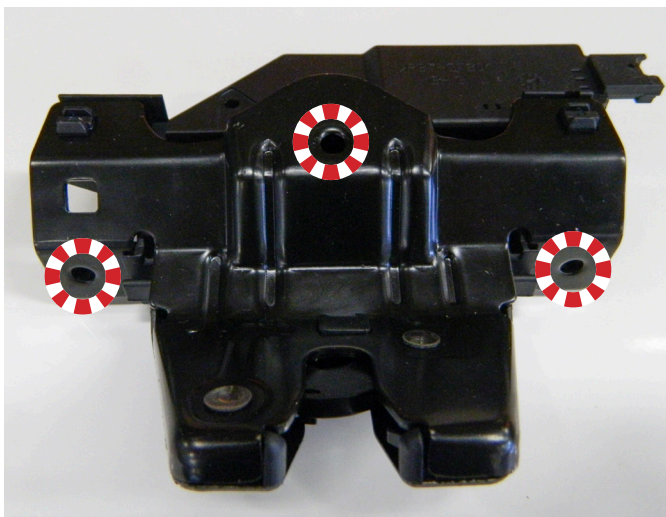

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

©2017 Dorman Products, Inc.

No reproductions in whole or in part without prior written approval.