

ARB BASE RACK

FITTING INSTRUCTION

Part Number: 1780440/450/460/470

Product Description: Horizontal Narrow/Vertical Narrow/Horizontal Wide/Vertical Wide Mount

WARNING

- ◆ Mounting kits with **40mm** narrow 3752563 clamp can support **3kg/6.6lb** per bracket
- ◆ Mounting kits with **100mm** wide 3752562 clamp can support **6kg/13.2lb** per bracket
- ◆ Do not use this product for any product, other than those specified by ARB
- ◆ This product must be installed exactly as per these instructions using only the hardware supplied
- ◆ This product or its fixing must not be modified in any way
- ◆ These instructions are correct as at the publication date
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components
- ◆ Work safely at all times
- ◆ Unless otherwise instructed, tighten fasteners to specified torque
- ◆ Fastener torques are to be checked at regular intervals

ARB 4x4 ACCESSORIES

Corporate Head Office

www.arb.com.au

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA 3137

Tel: +61 (3) 9761 6622
Fax: +61 (3) 9761 6807

Australian enquiries
North & South American enquiries
Other international enquiries

sales@arb.com.au
sales@arbusa.com
exports@arb.com.au

 


REQUIRED TOOLS FOR FITMENT OF PRODUCT:

13mm Spanner/Wrench

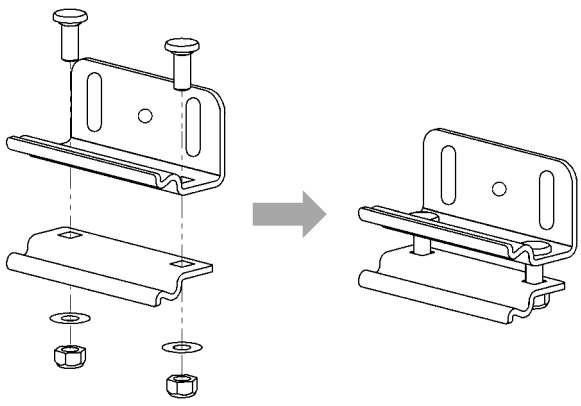
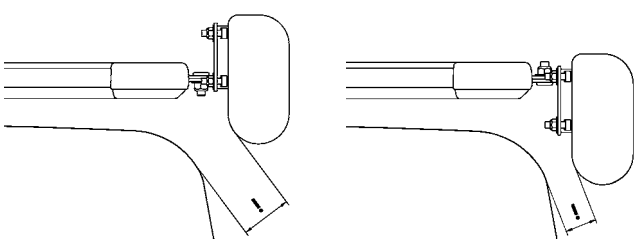
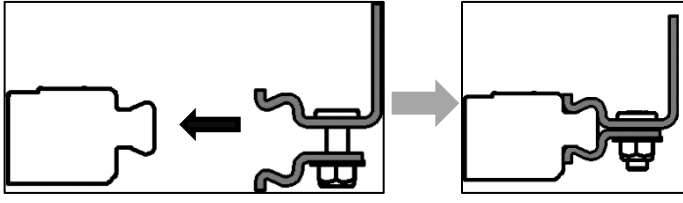

FASTENER TORQUE SETTINGS:

SIZE	Torque Nm	Torque lbft
M8	22Nm	16lbft

PARTS LISTING

APPLICATION.	PART NO.	QTY	DESCRIPTION
	3750746/47/48/49	2	BRKT UNIVERSAL
	3752562 OR 3752563	2	BRKT ACC CLAMP 100MM OR BRKT ACC CLAMP 40MM
	6151921	2 or 4	BOLT COHD M8x20 PC8.8 LWHD
	6151223	2 or 4	NUT NYLOC M8 BLACK
	4581085	2 or 4	WASHER M8x19x1.2mm BLACK

FITTING PROCEDURE

	<p>1. Assemble brackets with a pair of M8 bolts, washers and nuts</p> <p>Only tighten nuts 3-4 turns</p>
	<p>2. Plan mounting</p> <ul style="list-style-type: none"> • The bracket can mount flange up or flange down • Check clearance distance to vehicle panels • Check door opening • Check window opening
 	<p>3. Fit the mounting brackets over the dovetail. Tighten fasteners to specified torque</p>