



## INSTALLATION INSTRUCTIONS

1. Insert a clamp into the narrow space between the signal switch housing and the strapping bracket.
2. Loop the clamp around the steering column at desired position.
3. Engage the two ends of the clamp and tighten the screw until it hold the switch firmly and properly.
4. Ensure good grounding by scraping a small area of paint off the steering column from where the clamp is located to allow metal contact.

