

Installation Instructions for 101xx Performance Alternators

- 1.** Disconnect the ground cable from the battery.
 - 2.** Disconnect all wire connections from the alternator and label for future replacement.
 - 3.** Loosen mounting and tension arm bolts.
 - 4.** Hold the alternator securely while removing the mounting bolts and spacers. Remove old alternator.
 - 5.** Install new alternator and replace all mounting bolts and spacers. Do not fully tighten bolts.
 - 6.** Replace drive belts on pulleys and adjust belt tension. (Belt should have 1/2" to 3/4" play as light pressure is applied at midpoint between pulleys.)
 - 7.** Tighten all bolts and reconnect alternator wires and battery ground cable to complete installation.
- NOTE:** 1-wire alternators require only 1-wire to operate. Reconnect only the main output wire to positive lug and remove or tape off all other existing wires. Do not remove plastic cover from regulator terminals on 1-wire models.



1-800-345-4545 **jegs.com**