

# **Installation Instructions for 41438 Transmission Temperature Gauge LED Digital**

\* Always disconnect the battery **before** attempting any electrical work on your vehicle.\*

## **KIT COMPONENTS**

- ◇ One (1) LED Gauge
- ◇ One (1) Temperature Sender

## **WIRING INSTRUCTIONS**

**Note:** Automotive circuit connectors are the preferred method of connecting wires. However, you may solder if you prefer.

*Ground - Black* Connect directly to an engine ground such as the engine block. For the most accurate readings, connect to the same ground as the sending unit.

*Power – Red* Connect to a switched +12V source such as the ignition switch.

*Dimmer - Purple* Connect to the parking lights to dim the LEDs 50% when the headlights are on. However, **do not** connect to the headlight rheostat control wire; the dimming feature will not work properly. Otherwise, connect to ground for permanent 100% brightness.

*Temperature - Blue* Connect to the output of the temperature sending unit.



**1-800-345-4545 [jeps.com](http://jeps.com)**