

Oil Pressure Sending Unit User Guide

555-41608



Wiring Instructions

Once you have replaced the existing oil pressure sending unit with the included unit follow the wiring instruction below.

Orange Wire

- The orange wire connects to the "S" terminal on the sending unit.

Black Wire (Ground)

- Connect the "G" terminal on the sending unit to an engine block ground.
- Be sure to use 18-gauge wire.

Automotive circuit connectors are the preferred method of connection. The wires can be soldered.

