

## **Installation Instructions for 52206 JEGS Billet Air/Oil Separator Kit**

### **Installation Instructions:**

- Tighten the two hose barb fittings into the top of the air/oil assembly.
- Put a small amount of grease on the o-ring.
- Position the vent & tighten it into the air/oil separator head (on the side where the hose is attached to the intake manifold).
- Screw the cup onto the assembly – hand tight only.
- Mount the air/oil separator assembly in the PCV hose that goes between the valve cover and the induction system. Cut and re-use the existing hose, or use the hose supplied with this kit. Position the air/oil separator assembly in a way so that the unit is mounted upright w/ the cup at the bottom (the unit is small & light and can be hang from the hose w/o any mounting brackets).
- Use the supplied clamps to retain the hoses to the hose barbs.
- When servicing the vehicle unscrew the cup and discard any oil that is captured by the air/oil separator.
- Check the volume of oil in the cup after the first 100 miles and check it frequently to get an idea on how often it will need to be emptied.

