

## Installation Instructions for 60001 & 60044 Ring and Pinion

All sets are matched pairs and identified by matching numbers on the ring and pinion. Make sure you have a matched set.

Clean all parts before you begin the assembly process. Apply a light coat of oil to all bearings.

Examine all components and remove any burrs, nicks or sharp edges that could cause components to not seat properly.

### Checking Backlash



It is suggested that you set backlash to .008-.010 inch (see illustration).

Backlash is the free movement of the ring gear with the pinion held fixed in place.

Correct backlash is obtained by shimming or adjusting the ring gear away from or closer to the pinion.

Pinion bearing preload should be approximately 15 in-lb of rotating torque if you are re-using the bearings. If you are installing new bearing, you should obtain 25 in-lb of rotating torque. This is accompanied by a preload shim pack (of various thicknesses) or a crush sleeve. When final assembly is being completed, you should use a new crush sleeve.

Correct pinion position is obtained by shimming the pinion in or out, to obtain the correct tooth pattern. All housings are not shimmed in the same location, but shimming still moves the pinion in or out. In most housings, the shim is located between the pinion teeth and the pinion head bearing. It is suggested that you start with the same shim thickness on the new set that was used on the old set.


### Obtaining Proper Gear Pattern

Paint gear teeth with a marking compound on both the drive and coast side.

Rotate ring gear several revolutions in both directions while resistance is being applied to the pinion.

### Suggested Installation Parts:

555-81655 Ring & Pinion Set Up Tool  
555-28050 Gear Oil  
555-60120 Limited Slip Additive

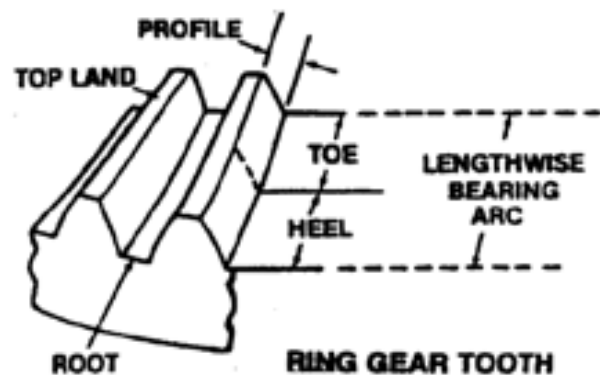

## PATTERN INTERPRETATION

### (RING GEAR)

DRIVE SIDE

COAST SIDE

HEEL

TOE

TOE

HEEL



Normal or desirable pattern. The drive pattern should be centered on the tooth or slightly toward the toe. The coast pattern should be centered on the tooth, but may be slightly toward the toe. There should be some clearance between the pattern and the top of the tooth.



Pinion is too deep. Move pinion away from gear centerline.



Pinion is too shallow. Move pinion toward centerline of gear.

### **Pattern Movements Summarized**

- (1) Decreasing backlash moves the ring gear closer to the pinion.
- (2) Increasing backlash moves the ring gear away from the pinion.
- (3) Deep pinion position, with the backlash correct, moves the pinion closer to the ring gear. Drive pattern moves deeper on the tooth (flank contact) and slightly toward the toe. Coast pattern moves deeper on the tooth and toward the heel.
- (4) Shallow pinion position, with the backlash correct, moves the pinion further from the ring gear. Drive pattern moves toward the top of the tooth (face contact) and toward the heel. Coast pattern moves toward the top of the tooth and slightly toward the toe.

### **Fastener Torque Specifications**

#### Ring Gear Bolts

3/8" All	45-50 ft-lb
7/16" All	60-65 ft-lb
1/2" All	100-110 ft-lb

#### Carrier Cap Bolts

7/16" (5/8" head)	60-65 ft-lb
1/2" (3/4" head)	80-85 ft-lb

### **Lube**

Fill the gear case with sufficient amount of EP-90/140 gear lube of MIL spec. L-2105C or better and maintain the proper level at all times. Proper maintenance is a must to protect your safety and working life of your gear set.

NOTE: For oval track racing, add 2 to 3 additional pints of gear lube.

### **Break-In Procedure**

All ring and pinion sets require a brief break-in period in order to ensure long life and quiet operation. The following break-in procedure is recommended before heavy load and constant usage.

1. Bring axle to normal operating temperature by driving vehicle for approximately 15 to 20 miles. Do not create any shock loads.
2. Let the axle assembly cool completely.
3. For the next 200 miles of operation, drive gently, without any heavy loads.
4. For trailer towing, an additional cycle of 15 to 20 miles break-in is required with the trailer after step #3. This is important! To properly break-in a new gear set, 500 miles of driving is recommended before constant towing.



1-800-345-4545 [jeps.com](http://jeps.com)