

Installation Instructions for 60720, 60722 & 60725 Quick Release Steering Hub

NOTE: THESE KITS ARE DESIGNED FOR USE ON OFF-ROAD PERFORMANCE VEHICLES ONLY. THEY ARE NOT LEGAL FOR STREET USE.

OPERATION

This unit has a positive locking feature which requires that the outside slip ring be pulled up when initially installing over the inner splined core on the shaft. To install, pull up on the outer slip ring with unit started onto the splines, then release the slip ring while pushing down over the splined core and the unit will lock on. Simply reverse the procedure for removal.

INSTALLATION

1. Using fine grit sandpaper to remove any oil or dirt, clean the portion of the steering shaft were the steering hub insert will be welded.
2. Press the insert onto the steering shaft and weld. Welding is to be preformed by a certified welder.
3. Mount steering wheel to quick release hub using the supplied bolts and washers. Loc-tite™ threads and tighten to 10-12 ft/lbs. **DO NOT EXCEED.**

WARNING! Keep hub free of dirt and the unit cleaned and lubricated regularly.



1-800-345-4545 jeps.com