

Installation Instructions for 65520

JEGS Digital Tire Gauge

Warning

- Do not exceed 150 psi (10 bar) or damage will occur to unit.
- Do not exceed the inflation pressure rated for tire or violent explosion can occur resulting in serious injury or death.
- Do not use to inflate dry-rotted or damaged tires or violent explosion can occur resulting in serious injury or death.

Caution

- Keep unit dry. Moisture can damage the precision electronics inside.
- Keep the inflator away from electromagnetic fields.
- Avoid dropping the inflator.

Specifications

- Pressure Range: 0-15 psi (0-10 bar)
- Available Units of Measure: psi, bar, kpa & kg/cm²
- Readout Resolution: 0.1 psi (0.05 bar, 0.05 kg/cm²)
- Accuracy: +/- 1% (0.5 psi)
- Temperature Range: -0.4° to 104° F (-18° to 40° C)
- Batteries: (2) AAA (1.5 V, LR03)
- Applications: Motorcycle, Car, Small and Mid-sized Van power supply

Functions

- To turn inflator on press unit button. Display should read 0.0 psi.
- To select desired units of pressure press “UNIT” button repeatedly until desired unit of pressure is displayed.
- The “LIGHT” button controls the backlight of the LCD display. The backlight initially stays on for 15 seconds after pressing “UNIT” button, and then automatically turns off; press the “LIGHT” button to turn the backlight on again.
- To turn inflator off press and hold “UNIT” till display shuts down.

Use

- Connect air supply to inflator.
- Attach inflator to tire valve by pushing down the fill fitting plug thumb lever.
- Squeeze fill lever to inflate tire to desired pressure on display.
- If pressure exceeds desired reading, depress fill lever half-way to bleed off excess pressure.
- Detach inflator from tire valve by pushing down the fill fitting plug thumb lever.

Battery Replacement

- Unscrew cover to expose batteries on the rear of gauge display.
- Remove batteries.
- Replace batteries with AAA. (Repeat for each side)
- Replace the battery covers and screw back into place.

Troubleshooting

- Battery Low Icon on Display: Icon indicates the battery is low (only appears with low battery). Inflator should still function while icon is showing. Batteries should be replaced as soon as possible.
- Irresponsive Display: Batteries are dead and require replacement.



1-800-345-4545 jegs.com