




# INSTRUCTION MANUAL



Tested to ANSI Safety and performance requirements.

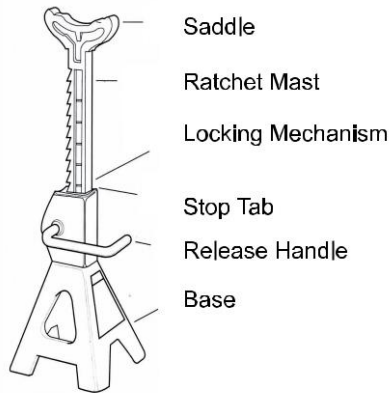

- Do not get under the vehicle to position or remove the jack stands.
- Secure the parking brake and block un-lifted tires.
- Stands are not to be used to simultaneously support both ends and one side of the vehicle.
- Always use jack stands on level, solid ground. Never use on slope, incline, angled or soft surface.
- Always use jack stands in pairs, on the same axle, and at the same height.
- Do not overload beyond the rated capacity.
- Support the vehicle only on the areas specified by the vehicle manufacture.
- Place load on center of saddle only.
- Make sure the load and stands are stable.
- Never use any other saddles, supports or alter these stands in any way.
- Failure to heed these warning may result in injury or property damage.
- Read, study, and understand all warnings and operating instructions prior to use.
- Keep children away from working area.

### **Warning!**

The use of portable automotive lifting and support devices is subject to certain hazards that cannot be prevented by mechanical means, but only by the exercise of intelligence, care, and common sense. It is therefore essential to have owners and personnel involved in the use and operation of the equipment who are careful, competent, trained, and qualified in the safe operation of the equipment and its proper use. Examples of hazards are dropping, tipping or slipping of loads caused primarily by improperly secured loads, overloading, off-centered loads, use on other than hard level surfaces, and using equipment for a purpose for which it was not designed.