

Installation Instructions for 81060 In-Line Air Pressure Regulator

Instruction for use:

1. Air pressure can be regulated from 40psi to 140psi.
2. Connect your air pressure regulator between your air powered tool and air source.
3. Set the inlet pressure at the air source to a minimum of 150psi.
4. Adjusting the regulator to desired pressure by rotating the inline regulator dial up to 140psi and then down to desired pressure.
5. Always reset the pressure to 140psi on the dial and then down to desired pressure to obtain the most accurate pressure.
6. Air supply needs to be clean and dry air.



1-800-345-4545 jeps.com