

## ***Installation Instructions for 81149***

### ***Air Impact Screw Buster***

***For Standard 0.401 in. Shank Air Hammer***

**CAUTION: INJURY HAZARD!** Disconnect air supply from air hammer to prevent accidental starting and potential injury while placing a tool bit in the bore.

1. Insert selected bit into 5/16 in. (8 mm) hex bore of tool.
2. Place the shank into bore and spring of air hammer.
3. Place the desired tool bit into the fastener screw head and depress air hammer trigger, while set to low pressure, to actuate hammering.
4. While hammering, apply moderate pressure to the air hammer toward the fastener with one hand at the same time rotating the handle of JEGS screw buster in a loosening direction with the opposite hand.



**1-800-345-4545 [jegs.com](http://jegs.com)**