

Installation Instructions for 81450 & 81455

Shop Floor Fans

110 V 1350 RPM

JEGS Shop Fans are widely used for ventilation and cooling down temperatures in factories, warehouses, workshops, offices, and other public areas. It has a reasonable structure, low barycenter, easy to move, large air volume, energy-saving, low noise, stable working, safe to use etc.

Specifications

Part Number	Size	Voltage	Frequency	Power	Air Volume	Speed
81450	16"	110 V	60 Hz	130 W	85 m ³ /min	1350 RPM
81455	20"	110 V	60 Hz	180 W	142 m ³ /min	1350 RPM

Operating Instructions:

- a. The voltage and frequency indicated on the nameplate should be in compliance with local supply voltage and frequency
- b. Speed control adjustment can be made on the control panel. 0 is off & speeds 1, 2, & 3 are for low, medium, and high.
- c. Fan head tilt adjustment: Turn the fan head to the desired angle.

Safety Instructions:

- a. Do not block the oscillation of the fan to avoid accidents.
- b. Do not hitch the wire to avoid shell in any manner.
- c. If you need to replace the wire please call the proper service representative.
- d. Unplug from the outlet, and then remove parts before cleaning. Do not bend the blade to avoid change in the angle of the blade.

Maintenance:

When you stop using the fan, it should be cleaned and put in a dry place to prevent damage.



1-800-345-4545 jeps.com