

## ***Installation Instructions for W89500 & W89501 Electronic Fuel Injection Test Light***

1. Disconnect harness connector from injector.
2. Plug test light into connector and start engine.

Flashing light indicates electrical system is functioning correctly.  
Steady light or no light indicates malfunctioning electrical system.  
If problem persists, check fuel system.

