

SLIDE HAMMER PULLER SET


3-Jaw Internal Puller

Designed for "inside" pulling jobs such as, bearing cups, seals and outer races.



3-Jaw External Puller

Versatile outside jaws allow you to pull gears and bearings.

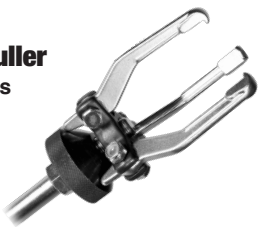


Locking Plier Adapter

Attach your locking pliers to the slide hammer for jobs where jaws won't work.




2-Jaw Internal Puller

Designed for "inside" pulling jobs such as, bearing cups, seals and outer races.

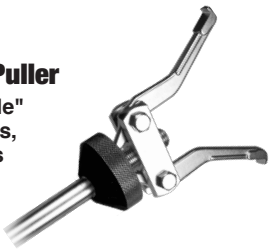

2-Jaw External Puller

Versatile outside jaws allow you to pull gears and bearings.

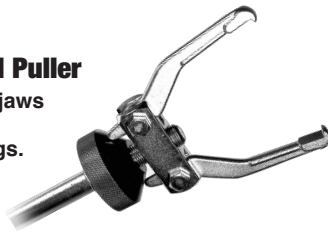


Rear Axle Puller

Removes flange type axles from most passenger cars and light trucks.



Dent Puller

Pulls out those hard to access dents and creases in auto bodies.

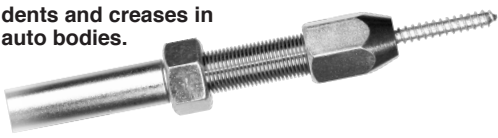

Puller Hook

Used to pull bearings and seals in situations where conventional methods won't work.



- Replacement Parts:**
- W89725-1 Jaw Spreader Cone
 - W89725-2 1-1/2" Tall Axle Puller Flange
 - W89725-3 2 Way Puller Cross Head
 - W89725-4 3 Way Puller Cross Head
 - W89725-5 3-3/8" Tall Axle Puller Flange
 - W89725-6 Hammer
 - W89725-7 Screw for Puller Cross
 - W89725-8 Hook Adapter
 - W89725-9 Locking Plier Adapter
 - W89725-10 Dent Puller Screw Adapter
 - W89725-11 Puller Jaws Internal/External (3)

