




Installation Instructions

MOROSO UNIVERSAL ULTRA 40 RACE WIRE


- In the lab, on the dyno, and at the racetrack, Moroso Ultra 40 Race Wire has proven to be the finest wire available for today's racing engines. Proper installation will ensure that you get all the performance your ignition system can deliver.

NOTE: To ensure that your engine's firing order remains in proper sequence, we recommend that you replace only one wire at a time.

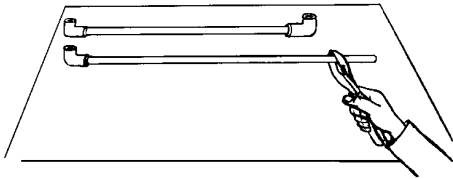


1. Determine the required wire length of each spark plug wire and choose the shortest wire that is long enough to reach. Cut the end of the wire to proper length with a side cutter or razor blade.

FOR HEI WIRE SETS PROCEED TO STEP 3

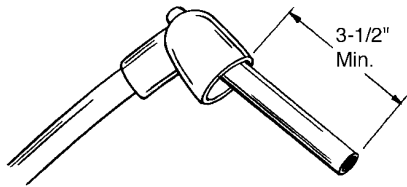

2. **For Non-HEI Distributor boots/terminals only!** Lubricate the end of the wire with a silicone spray lubricant, then slide a boot over the end of the wire. Pull the boot up the wire a minimum of 3-1/2" for stripping tool clearance.

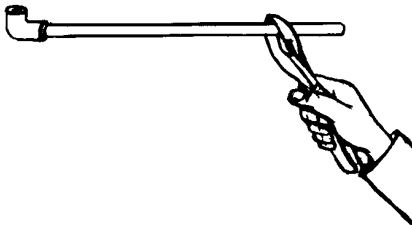

3. Strip at least 1/2" of insulation away from conductor using a wire stripping tool. Be extremely careful not to cut the conductor.




Installation Instructions

MOROSO UNIVERSAL ULTRA 40 RACE WIRE


- In the lab, on the dyno, and at the racetrack, Moroso Ultra 40 Race Wire has proven to be the finest wire available for today's racing engines. Proper installation will ensure that you get all the performance your ignition system can deliver.

NOTE: To ensure that your engine's firing order remains in proper sequence, we recommend that you replace only one wire at a time.

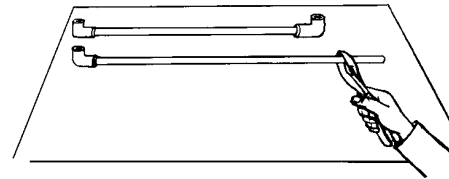


1. Determine the required wire length of each spark plug wire and choose the shortest wire that is long enough to reach. Cut the end of the wire to proper length with a side cutter or razor blade.

FOR HEI WIRE SETS PROCEED TO STEP 3

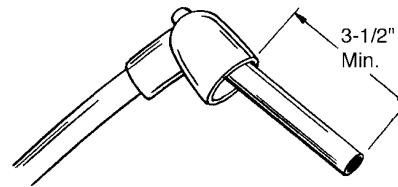


2. **For Non-HEI Distributor boots/terminals only!** Lubricate the end of the wire with a silicone spray lubricant, then slide a boot over the end of the wire. Pull the boot up the wire a minimum of 3-1/2" for stripping tool clearance.

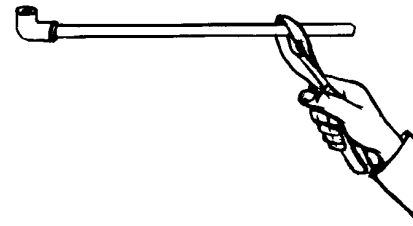

3. Strip at least 1/2" of insulation away from conductor using a wire stripping tool. Be extremely careful not to cut the conductor.

For Technical Assistance, call Moroso's Tech Line at (203) 458-0542, 8:30am-5:00pm Eastern Time

NOTE! Proper care must be taken when stripping and installing terminals so that conductor integrity and continuity is maintained. If the conductor is broken or cut, the result will be an engine that misfires due to internal arcing (which also causes radio interference) or arcing directly to ground. **WIRE CARE:** If cleaning is needed, wipe down with a silicone spray. DO NOT USE PARTS CLEANER OR OTHER SOLUTIONS CONTAINING PETROLEUM DISTILLATES!

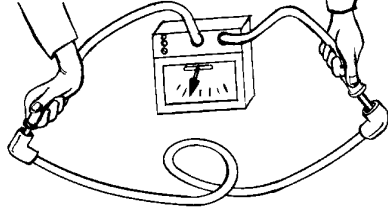


6. Check the wire's continuity with a test light or preferably an ohm meter. The meter should read approximately 40 ohms per foot of wire.




For Non-HEI Wire Sets, lubricate the end of the wire and terminal and pull the boot over the terminal. Check to make sure that the terminal is properly seated and aligned in the boot.


For HEI Wire Sets, lubricate the end of the wire and terminal and push into the distributor boot. Check to make sure that the terminal is properly seated and aligned in the boot.

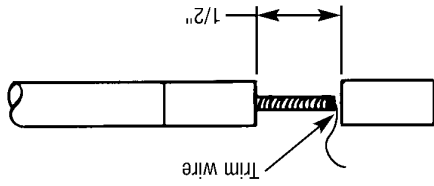

4. Remove the cut insulation and wire stripping tool. Trim any loose strands from the wound conductor. Side cutters are best for this.

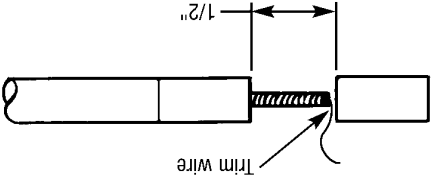


4. Remove the cut insulation and wire stripping tool. Trim any loose strands from the wound conductor. Side cutters are best for this.

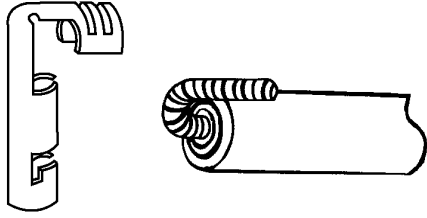

For Non-HEI Wire Sets, lubricate the end of the wire and terminal and pull the boot over the terminal. Check to make sure that the terminal is properly seated and aligned in the boot.



For HEI Wire Sets, lubricate the end of the wire and terminal and push into the distributor boot. Check to make sure that the terminal is properly seated and aligned in the boot.

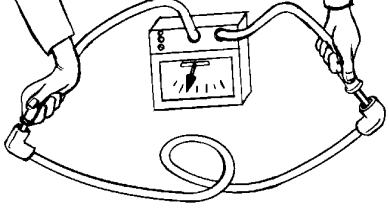

6. Check the wire's continuity with a test light or preferably an ohm meter. The meter should read approximately 40 ohms per foot of wire.

NOTE! Proper care must be taken when stripping and installing terminals so that conductor integrity and continuity is maintained. If the conductor is broken or cut, the result will be an engine that misfires due to internal arcing (which also causes radio interference) or arcing directly to ground. **WIRE CARE:** If cleaning is needed, wipe down with a silicone spray. DO NOT USE PARTS CLEANER OR OTHER SOLUTIONS CONTAINING PETROLEUM DISTILLATES!

For Technical Assistance, call Moroso's Tech Line at (203) 458-0542, 8:30am-5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS
80 Carter Drive • P.O. Box 1470 • Guilford, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com