



HP WASHABLE AIR FILTER ELEMENTS

CLEANING INSTRUCTIONS

1. Pre-clean by lightly tapping the filter to loosen any embedded dirt particles. If any dirt remains, then lightly brush with a soft bristle brush. (If this step has sufficiently cleaned the filter element, then simply re-oil and re-install.)
2. SPRAY an ample amount of K&N® Cleaner (P/N 99-5050 comes with cleaner and oil) on the entire filter element and let it soak in for approximately 10 minutes. Use only K&N® cleaner, because harsh detergents, cleaning solutions, or solvents can damage the filter element and impair its ability to work effectively.
3. RINSE the element with LOW-PRESSURE water from the clean side (inside) through the filter to the dirty side (outside). This removes the dirt without washing it deeper into the media of filter element.
4. Allow the filter to dry naturally without the aid of compressed air or heat dryers. Compressed air can blow a hole in the filter media and excessive heat can cause it to shrink; both of which can impair the element's ability to work effectively and voids warranty.
5. Put on an even coat of K&N® filter oil to your filter. Allow the oil to soak into the filter before installation.

IMPORTANT! You must never use a Mr. Gasket HP Air Filter without filter oil. The oil prevents dirt from passing through the filter element.

6. RE-INSTALL air filter element, make sure it seats properly in the air cleaner base. Replace air cleaner lid, add any bolts, clips, etc. and tighten to factory specifications.

NOTE: Mr. Gasket HP Air Filter Element will need to be cleaned and re-oiled in 50,000 to 100,000 miles.

97141420

Date: 9-1-16