



2501 Ludelle Street  
Fort Worth, Texas 76105  
817-244-6212 Phone • 817-244-4024 Fax  
888-350-6588 Sales • 800-423-9696 Tech  
E-mail: [painless@painlessperformance.com](mailto:painless@painlessperformance.com)  
Web: [www.painlessperformance.com](http://www.painlessperformance.com)

# 60128

## LS Engine 36" Coil Extension Harness Kit

1. Make sure the ignition key is in the off position.
2. Unplug the factory light grey, 7 pin coil connectors from the coil sub-harnesses that are located on each valve cover.
3. Plug the Painless pigtail labeled "Driver Coils" in line with the driver side coil sub-harness and driver side main harness connector.
4. Plug the Painless pigtail labeled "Passenger Coils" in line with the passenger coil sub-harness and passenger side main harness connector.
5. Start vehicle. If vehicle won't start recheck connections.

### **Painless Performance Limited Warranty and Return Policy**

Chassis harnesses and fuel injection harnesses are covered under a lifetime warranty.

All other products manufactured and/or sold by Painless Performance are warranted to the original purchaser to be free from defects in material and workmanship under normal use. Painless Performance will repair or replace defective products without charge during the first 12 months from the purchase date. No products will be considered for warranty without a copy of the purchase receipt showing the sellers name, address and date of purchase. You must return the product to the dealer you purchased it from to initiate warranty procedures.