

3/4" Mounting Hole Switch with Synergy Bezel and Accent Rings

MOUNTING: It is important that the mounting nut be tighten as much as possible

**WIRING:** 

Engraved in the black plastic area on the base of the switch is abbreviated wording defining each stud terminal. Follow the chart below for the proper connections to the switch.

but it must be done without damaging the mounting nut itself. If you must use a hand tool to accomplish this, install one of the colored "O" rings that will not be used after final assembly or wrap the nut with three lavers of masking tape. Continue tightening the nut. Remove the tape or and install the final colored O-ring. We recommend keeping the un-used O-rings in case the switch needs re-tightening at a later date.

1						
	SWITCH WORDING	USED FOR	CONNECTION DEFINITION	Access 24/7, Express, Bare Bonz I & II, AP-97, CP-94, DM-16 Wire Colors	CP-92 & Older Colors	
	BAT	Battery Feed	Requires a battery (hot all the time) wire.	Red	Yellow	
	IGN	Ignition Feed	This wire is hot with the key in the run & crank position.	Orange	Orange	
	ACC	Accessory Feed	This wire is hot with the key in the accessory & run position.	Brown	Red	
			Terminal is inactive in the crank position.		4	
	ST	Starter	This wire hot with the key in the crank position only.	Lt Blue	Lt Blue	