HIGH PERFORMANCE TRANSMISSION PARTS

Instructions

# **Accumulator Piston** Kit

## Part No.


## 22841-04K

- Piston
- PTFE Scarf-Cut Seal, Large
- PTFE Scarf-Cut Seal, Small
- D-Ring Large
- D-Ring Small

#### Also Available

## **Replacement Seal Kit**

22841-04SK

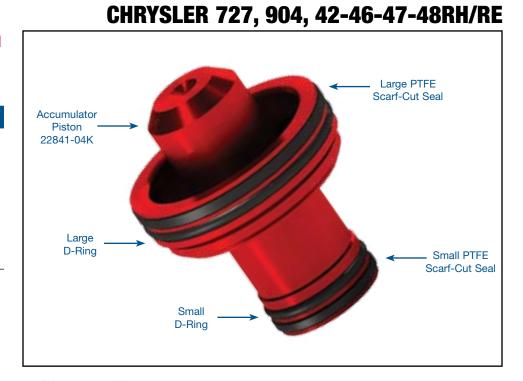

### 1. Dissassembly

a. Remove and discard OE piston, then clean and inspect the bore.

### 2. Assembly & Installation

- a. Install Sonnax PTFE seals and D-rings on piston as shown.
- b. Lubricate seals.
- c. Install Sonnax piston.