

Removal of Residual Pressure From Distribution Block

CAUTION: Brake fluid will cause severe damage to paint. When you remove this nut, brake fluid will leak out. Make sure you keep fluid in the master cylinder at all times.



Remove nut from bottom of this distribution block.



When the nut is removed, you will see these 3 parts.



Remove rubber seal.



Put these parts aside.



Push piston back into nut.



Screw piston and nut back into distribution block.