





757-842-6497
WWW.JLOSC.COM

J&L 3.0 Oil Separator (2005-10 Ford F-150 5.4) #3033D

Installation Instructions

Please see our install video of this product on our website www.JLosc.com Search: 3033D and click videos

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator, (1) J&L Mounting bracket, (2) Fine thread machine screws, (2) Course thread mounting screws
2	Gather all of the following tools needed for the installation: Drill with small drill bit for pilot holes, Phillips screwdriver, marker
3	Remove factory PCV line by pulling tabs and pulling it off of the engine. 
4	Mount bracket to firewall cowl. Hold bracket to area, mark holes with marker. We recommend drilling pilot holes to allow easy install of the bracket screws. 



5

Install oil separator to bracket with supplied screws, run hoses to appropriate connections. Connectors will "click" when installed fully. To remove connectors from fittings, depress large grey tab and pull up on fitting.

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.