



757-842-6497
WWW.JLOSC.COM


J&L 3.0 Oil Separator (2014-2017 Chevy SS, Passenger Side) (14-15 Model year with aftermarket intake systems only) #3083P

Installation Instructions

Install video available on our website www.JLosc.com Search: 3083P and click videos


Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator, (2) 15" Hoses with fittings, (1) J&L Mounting bracket, (2) M4 screws
2	Gather all of the following tools needed for the installation: 10mm socket and ratchet, Phillips screwdriver, long flat head screwdriver, and light oil for ease of install of hoses <input type="checkbox"/> Remove Engine cover <input type="checkbox"/> Remove 10mm Bolt holding fan controller to radiator fan, install JLT bracket. Install J&L Oil Separator to bracket with supplied screws.
3	
4	The PCV hose is under a few items. We recommend doing these few things to allow for better access: <input type="checkbox"/> EVAP hose to intake tube and rotate out of the way <input type="checkbox"/> Push heater hoses behind oil fill <input type="checkbox"/> Remove Map sensor (10mm bolt) <input type="checkbox"/> Unclip EVAP solenoid from metal bracket on front of cylinder head.

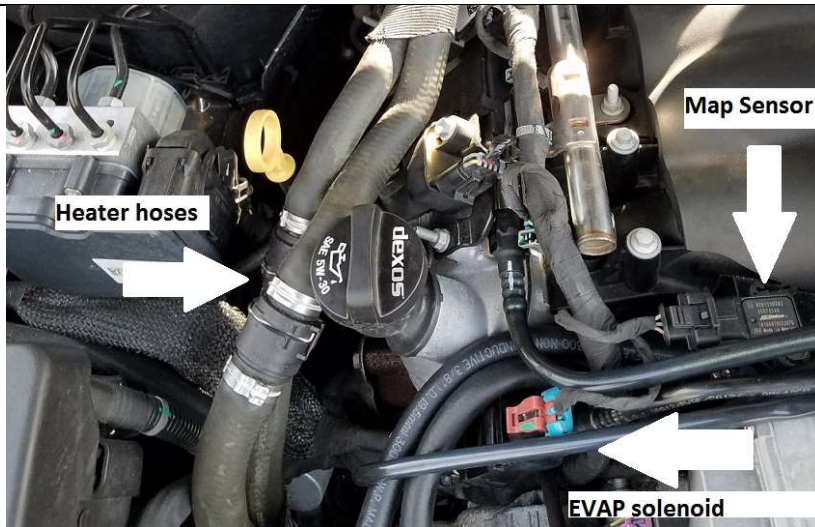

5

Now you will have access to the PCV hose. Remove hose by gently prying tab locking tab away and pull the entire hose away from engine.

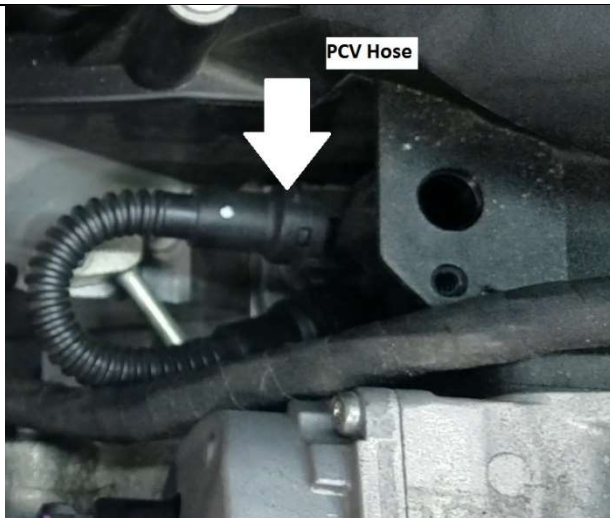

6 Route hoses behind the wiring harness and push hoses all the way to the barbs on the engine fittings, you will hear/feel a click as they engage. Route hoses between the EVAP solenoid and EVAP hose.



7 The hose from the intake manifold will run to the O (OSC) side of the can, the hose from the valley cover (dirty side) will run to the C (OSC) side of the can.

Use light oil to help aiding sliding the hoses onto the J&L Oil separator. Reinstall MAP sensor, intake (if removed), EVAP hose etc Check all connections and reinstall engine cover.



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied

warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.