

# **Hardware and Tools Lists**

#### HARDWARE LIST

Item	Part#	Description Qty
Α	46123	Air spring2
В	09111	Air spring spacer2
С	20937	Air line
D	10466	Zip ties6
E	21230	Valve cap2
F	21233	5/16" Hex nut
G	21234	Rubber washer2
Н	18411	Star washer2
1	18501	M8 Flat washer2
J	21236	Tee fitting1
K	21455	Schrader valve2
L	10638	Air line clamp6

#### **TOOLS LIST**



Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.

## Introduction

The purpose of this publication is to assist with the installation and maintenance of the Air Lift 1000 air spring kit.

Air Lift 1000 kits utilize a sleeve-style air bag that provides up to 1,000 pounds (454kg) of load-leveling support when installed into the vehicles coil springs. Each sleeve is rated at a maximum of 35 PSI (2.4BAR).

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair.

### NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.



INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.

INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

2 MN-1108