

Connector Breakdown

24 Terminal FT500 Main Connector

16 Terminal FT500 Auxiliary Connector

34 Terminal FT600 "A" Superseal Connector

34 Terminal FT600 "B" Superseal Connector

4 Terminal CAN -A Connector

2 Terminal CAN-B Connector