

Terminal	Function / Wiring	Switch Position
B	Battery or 12V power source	N/A
W	Power or 12V side of washer motor	N/A
1	To high speed side of wiper motor	Two click fully clockwise
2	To low speed side of wiper motor	One click clockwise
3	OFF / 12V	Fully counterclockwise

WARNING! : When the switch is in the 'OFF' position terminal '3' has 12 volts. DO NOT connect this terminal to any other power source or ground!