

# **INSTALLATION INSTRUCTIONS**

## **AMC Iron Distributor Gear PN 8005**

**Important:** Read these instructions before attempting the installation.

**Parts Included:**

1 - AMC Iron Gear, PN 8005

1 - Roll Pin

1 - Tube of Gear Lubricant

Note that the MSD Iron gear is only drilled on one side. You will need to install it on the shaft and line up the hole in the gear with that of the shaft. Finish drilling the hole with a 3/16" drill bit then install the new roll pin. Be sure to thoroughly clean the shavings away before installing the distributor.

**Note:** When installing the distributor, coat the entire gear with the supplied gear lubricant.

For information on improving the oil flow to the distributor gear, go to the Tech Support pages of [www.msdisignition.com](http://www.msdisignition.com)

---

**MSD IGNITION** • 1490 HENRY BRENNAN DR., EL PASO, TEXAS 79936 • (915) 857-5200 • FAX (915) 857-3344  
FRM27186 Created 11/05 Printed In U.S.A.

# **INSTALLATION INSTRUCTIONS**

## **AMC Iron Distributor Gear PN 8005**

**Important:** Read these instructions before attempting the installation.

**Parts Included:**

1 - AMC Iron Gear, PN 8005

1 - Roll Pin

1 - Tube of Gear Lubricant

Note that the MSD Iron gear is only drilled on one side. You will need to install it on the shaft and line up the hole in the gear with that of the shaft. Finish drilling the hole with a 3/16" drill bit then install the new roll pin. Be sure to thoroughly clean the shavings away before installing the distributor.

**Note:** When installing the distributor, coat the entire gear with the supplied gear lubricant.

For information on improving the oil flow to the distributor gear, go to the Tech Support pages of [www.msdisignition.com](http://www.msdisignition.com)

---

**MSD IGNITION** • 1490 HENRY BRENNAN DR., EL PASO, TEXAS 79936 • (915) 857-5200 • FAX (915) 857-3344  
FRM27186 Created 11/05 Printed In U.S.A.