1986-1993 Mustang 5.0L

# **Throttle Body & EGR Plate**

Part # 1501B,1503,1504,1514,1517,1518,1600



Special Tools Required:

Volt Meter

**Install Time:** 

Approximately 1 Hour

Difficulty:

2 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

# STEP 1

 Raise hood and allow engine to cool, disconnect negative battery terminal.

### STEP 2

 Loosen both of the air inlet tube clamps located on the throttle body and air cleaner, carefully remove the air inlet tube from the vehicle.

# STEP 3

 Carefully disconnect the throttle position sensor and idle speed control solenoid connectors from the throttle body and disconnect the EGR position sensor connector from the EGR valve.

#### STEP 4

- Carefully disconnect the EGR vacuum line from the EGR valve. Loosen the two hose clamps located on the EGR spacer that holds the throttle body coolant hoses and remove hoses. Disconnect throttle linkage.
- !CAUTION! Some coolant may discharge from the throttle body coolant hoses when removed.

# STEP 5

 Remove the four (4) throttle body attaching nuts and carefully remove the throttle body attaching nuts and carefully remove the throttle body and EGR spacer valve assembly from the upper intake manifold studs.

# STEP 6

 For maximum performance with the larger throttle bodies use the matching size EGR spacer and enlarge upper manifold mouth accordingly.

# STEP 7

 Remove the idle speed solenoid and install on the new throttle body. (Use supplied idle solenoid gasket.) Install new EGR valve on new EGR plate. (Use supplied gasket.)

#### STEP 8

- Position the following onto the intake manifold studs in order of listing.
- · EGR spacer gasket.
- EGR spacer.
- Throttle body gasket.
- Throttle body. Torque the throttle body attaching nuts to 12-18 ft.-lbs.







Check us out on Youtube www.youtube.com/bbkperformance

GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM



For any questions, email us: tech@bbkperformance.com

installation instructions



1986-1993 Mustang 5.0L

# **Throttle Body & EGR Plate**

Part # 1501B,1503,1504,1514,1517,1518,1600

# STEP 9

Connect the throttle position sensor, EGR
position sensor and the idle speed control
solenoid. Connect the throttle body coolant
hoses and tighten securely. Connect the throttle
linkage.

### **STEP 10**

 Re-install the sir inlet tube onto the throttle body and air cleaner. Tighten the clamps firmly.

#### **STEP 11**

- Set the idle speed by using the following sequence:
- Turn the ignition switch to the OFF position.
- Turn the throttle plate hard stop screw control 5 turns clockwise from the fully closed position.
- Disconnect the idle speed control solenoid connector.
- Run the engine until it is at operating temperature.
- Turn the throttle plate hard stop screw counter clockwise until the factory idle speed setting is obtained
- Increased idle speed may be required if the engine has been modified.
- Turn the engine off and reconnect the idle speed control connector.

# STEP 12

Turn the ignition switch to the ON position but do not start the engine. Using a digital volt/ohmmeter, measure the voltage between the DG/LG and BK/W wires. Be sure the voltage is between 0.8v and 1.0v. If necessary, elongate the mounting holes on the throttle position sensor to obtain this specification.

# **Hardware Included**

1501B- GSK003-Throttle Body Idle Bypass Gasket (1pc)

<u>1503-</u> GSK003- Throttle Body Idle Bypass Gasket (1pc) GSK009- 75MM Throttle Body Gasket (1pc)

1504- GSK002- EGR Valve Gasket (1pc) GSK011- 75MM EGR Gasket (1pc)

<u>1514-</u> GSK003- Throttle Body Idle Bypass Gasket (1pc) GSK010- 80MM Throttle Body Gasket (1pc)

1517- GSK003- Throttle Body Idle Bypass Gasket (1 pc)

<u>1518-</u> GSK001- 65-75MM EGR Gasket (1pc) GSK002- EGR Valve Gasket (1pc)

1600- GSK002- EGR Valve Gasket (1pc)

GSK003- Throttle Body Idle Bypass Gasket (1pc)

GSK009-75MM Throttle Body Gasket (1pc)

GSK011-75MM EGR Gasket (1pc)



Join our Facebook page www.facebook.com/bbkperformance





Check us out on Youtube www.youtube.com/bbkperformance





For any questions, email us: tech@bbkperformance.com

installation instructions