




## DSL110 Installation Instructions

### RECOMMENDED TOOLS:

Ratchet with 13mm, and 9/16" sockets  
9/16" wrench  
Jack and jack stands or service lift

### INSTALLATION:

1. Lift vehicle and support safely under frame rails.
2. Support the transmission using a jack stand or jack.
3. Remove the (4) transmission cross-member bolts using an 13mm socket.
4. Place the BMR main mounting bracket under the OE cross-member and install the factory hardware using a 13mm socket as shown in **IMAGE 1**.
5. Position the BMR loop over the driveshaft and set it on top of the main mounting bracket. Insert the supplied 3/8" x 1.25" bolts, nuts, and washers as shown in **IMAGE 2**.
6. With the mounting bolts loose, shift the loop side to side to reach maximum clearance then tighten all bolts. Tighten main transmission cross-member bolts to 32 ft/lbs and driveshaft loop bolts to 35 ft/lbs.
7. Lower vehicle.

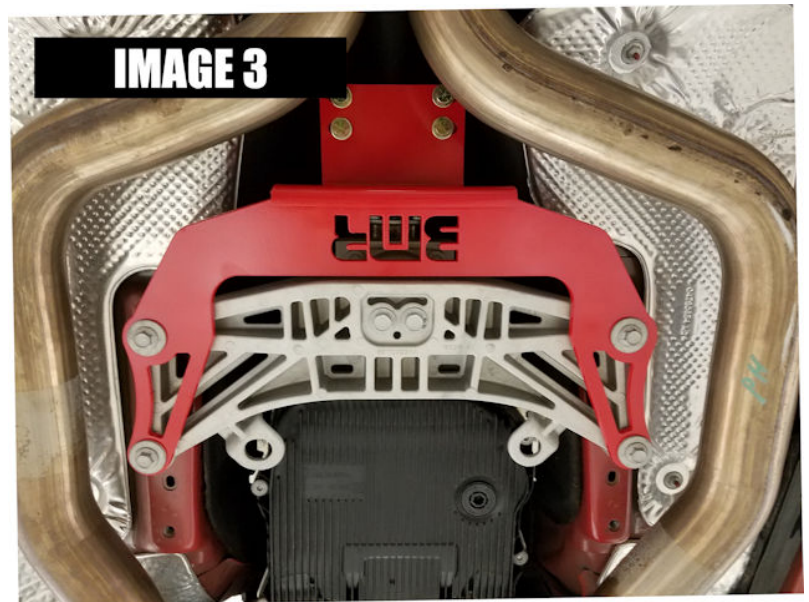

[WWW.BMRSUSPENSION.COM](http://WWW.BMRSUSPENSION.COM)

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.*