

RP19881 INSTRUCTION SHEET

- Press in both bushings as shown. Hammer bolts in opposing directions as shown in the diagram.
- Torque down nylon nut until washers are tight against bushing. Repeat on opposite end.

