Greaseable Sway Bar Bushing Instructions

1. Remove old sway bar bushings and end links.

Updated 13/MAR/02

BRH

4

Updated 13/MAR/02

BRH

- 4 2. Clean and remove any rust or scale from the sway bar.
- S 3. Grease the I.D. of the bushings and the contact area of the sway bar prior to installation. 4. Install bushings and brackets.
 - 5. Rotate the stabilizer bar back and forth to disperse the grease throughout the bushing. 6. Install end links.

Note: For periodic maintenance, each bushing requires three full pumps of the grease gun to insure proper lubrication.



your favorite grease.



Greaseable Sway Bar Bushing Instructions SUSPENSIXN. 1131 VIA CALLEJON, SAN CLEMENTE, CA 92673 1. Remove old sway bar bushings and end links. 2. Clean and remove any rust or scale from the sway bar. S 3. Grease the I.D. of the bushings and the contact area of the sway bar prior to installation. 4. Install bushings and brackets. 5. Rotate the stabilizer bar back and forth to disperse the grease throughout the bushing. Grease 6. Install end links. bushing I.D. Note: For periodic maintenance, each bushing requires three full pumps of the grease gun to insure proper lubrication. C 2002 Energy Suspension. All rights reserved. Install and maintain with May not be reproduced, in any form, or by any means without the written consent of Energy Suspension. your favorite grease.

Greaseable Sway Bar Bushing Instructions	
	EMENTE, CA 92673 Grease bushing I.D. all and maintain with r favorite grease.