Installation instructions

For 2"/ 50mm & 2-3/8"/ 60mm Creeper Wheels





1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

Parts list for 1 wheel only (multiply by 4 or 6, depending on the set you have).

- 1 Wheel (2" / 50mm or 2-3/8" / 60mm).
- 1 15.08.91.38 (Threaded bearing spacer).
- 2 15.08.11.38 (608 bearings).
- 2 15.03.105.40 (.470" x .260" x .035" washer).
- 2 15.05.71.42 (1/4-28 x 3/8" cap screw).
- 1 17383 Instructions.

Note: Metal caster is not included, you must reuse your original hardware. For casters with riveted axle, grind off one side and use a punch to remove rivet, or, use a hacksaw and cut rivet off next to wheel (between wheel and caster).

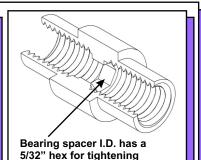

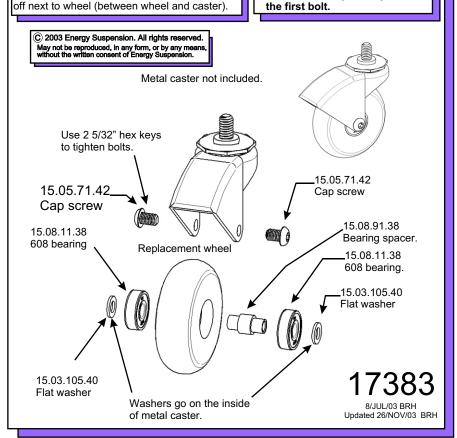


Installation instructions

For 2"/ 50mm & 2-3/8"/ 60mm Creeper Wheels




 1131 VIA CALLEJON. SAN CLEMENTE. CA 92673



- 1 Wheel (2" / 50mm or 2-3/8" / 60mm).
- 1 15.08.91.38 (Threaded bearing spacer).
- 2 15.08.11.38 (608 bearings).
- 2 15.03.105.40 (.470" x .260" x .035" washer).
- 2 15.05.71.42 (1/4-28 x 3/8" cap screw).
- 1 17383 Instructions.

Note: Metal caster is not included, you must reuse your original hardware. For casters with riveted axle, grind off one side and use a punch to remove rivet, or, use a hacksaw and cut rivet off next to wheel (between wheel and caster).

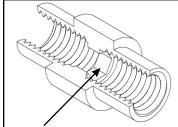

Bearing spacer I.D. has a 5/32" hex for tightening the first bolt.

