

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS \circledcirc Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit https://www.performanceparts.ford.com for warranty information






NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Kit contents:

Description	Quantity
FX4 Skid Plate	1
Bolts	4

Special Tool(s) / General Equipment

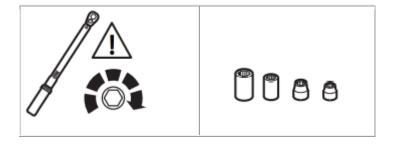



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Vehicles come with an undershield or a skid plate.

Remove the bolts and the engine front undershield.

Torque: 22 lb.ft (30 Nm)

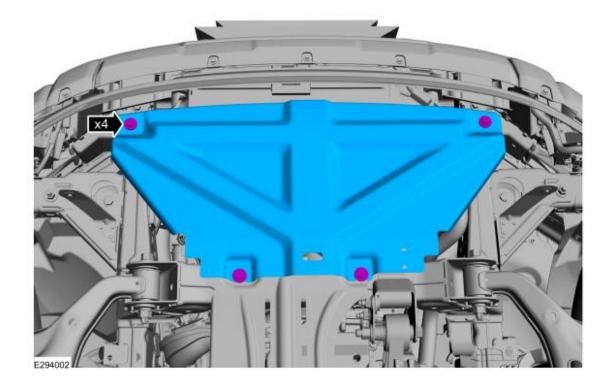




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


2. **NOTE:** Vehicles come with an undershield or a skid plate.

Remove the bolts and the skid plate.

Torque: 22 lb.ft (30 Nm)

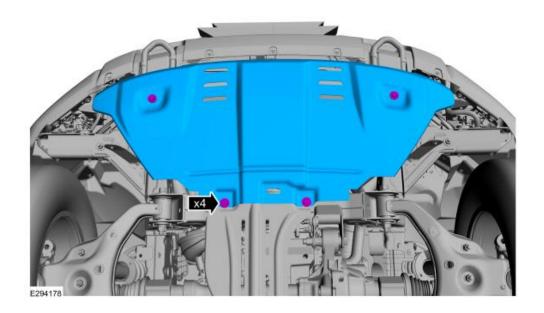

3. If equipped, remove the bolts and the front bumper air deflector. *Torque*: 28 lb.in (3.2 Nm)

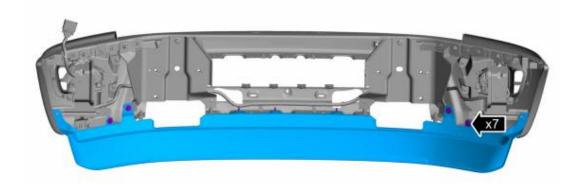



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

·		
Installation		

1. To install, reverse the removal procedure.

Ford Factory Shop Manual purchase options <u>www.motorcraftservice.com</u>

Techline 1-800-367-3788 Page 5 of 5 IS M-5018-RA 041322