


NOTE When connecting the RPM wire, follow the instruction above. If you connect the red & brown wires in parallel this may damage the instrument.

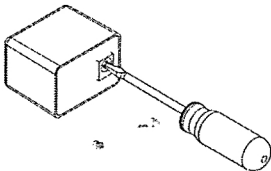

CAUTION!

If the meter needle is unstable at idle RPM, connect the signal filter according to the above diagram in order to solve the problem. Using a screw driver, gently turn the adjustment clock wise or counter clock wise until the meter needle stop to bounce.