

Gear Shift Knob Installation Instructions

Place column shift knob onto the shift lever. Once on, use setscrew (provided) and adjust knob so setscrew is not facing you, tighten setscrew. Do not remove the upper shift lever for any reason! The tension spring will pop out and it is very difficult to re-install.



Set Screw



ididitinc.com