


Installation Instructions for 15908

Fuel Pressure Regulator – Not for use with Alcohol

Caution: The installation of this product should be performed by a person knowledgeable in the repair and modification of a fuel delivery system.

1. Read all of the instructions before beginning the installation.
2. With the ignition off and the battery disconnected, relieve any residual fuel system pressure.
3. Place a catch pan beneath or shop towels around the regulator to catch any fuel that may be spilled during the installation.
4. Locate a suitable location to mount the regulator inside of the engine compartment.
5. Using the supplied mounting bracket as a template, mark the mounting bracket holes. Using a 1/4" bit, drill 2 holes for the supplied 1/4"-20 bolts, lock washers and nuts.
6. Attach the bracket to the regulator using the supplied hardware.
7. Remove the 3/8" NPT plugs from the inlet and both outlets on the regulator.
8. Attach the fuel supply line from the tank to the regulator using 3/8" NPT fitting (not included) and a liquid Teflon thread sealant such as JEGS #555-28011 (not included) to the port at the bottom of the regulator marked "IN".
9. Attach the feed line(s) to the carburetor(s) using 3/8" NPT fittings (not included) and a liquid Teflon thread sealant (not included) to the ports at either side of the regulator.
10. Install a 3/8" NPT plug (not included) in the open outlet port with liquid Teflon thread sealant (not included) if both sides are not utilized in this installation.
11. Tighten all connections.
12. Install a fuel pressure gauge by removing the 1/8" NPT pipe plug from the side of the regulator. Be sure to use liquid Teflon thread sealant (not included) on the gauge fitting.
13. Reconnect the battery and turn the key to the on position. Check for leaks and re-tighten if necessary.
14. Start the vehicle and adjust the fuel pressure by loosening the locknut and rotating the allen head set screw located at the top of the regulator.
15. Once the correct pressure is established tighten the locknut while holding the allen head set screw in place.
16. Remove and properly dispose of the fuel accumulated in the catch pan or shop towels during installation.

Maximum Inlet Pressure: 20 PSI
Inlet Port: 3/8" NPT
Outlet Pressure: 5-12 PSI
Outlet Ports: 3/8" NPT

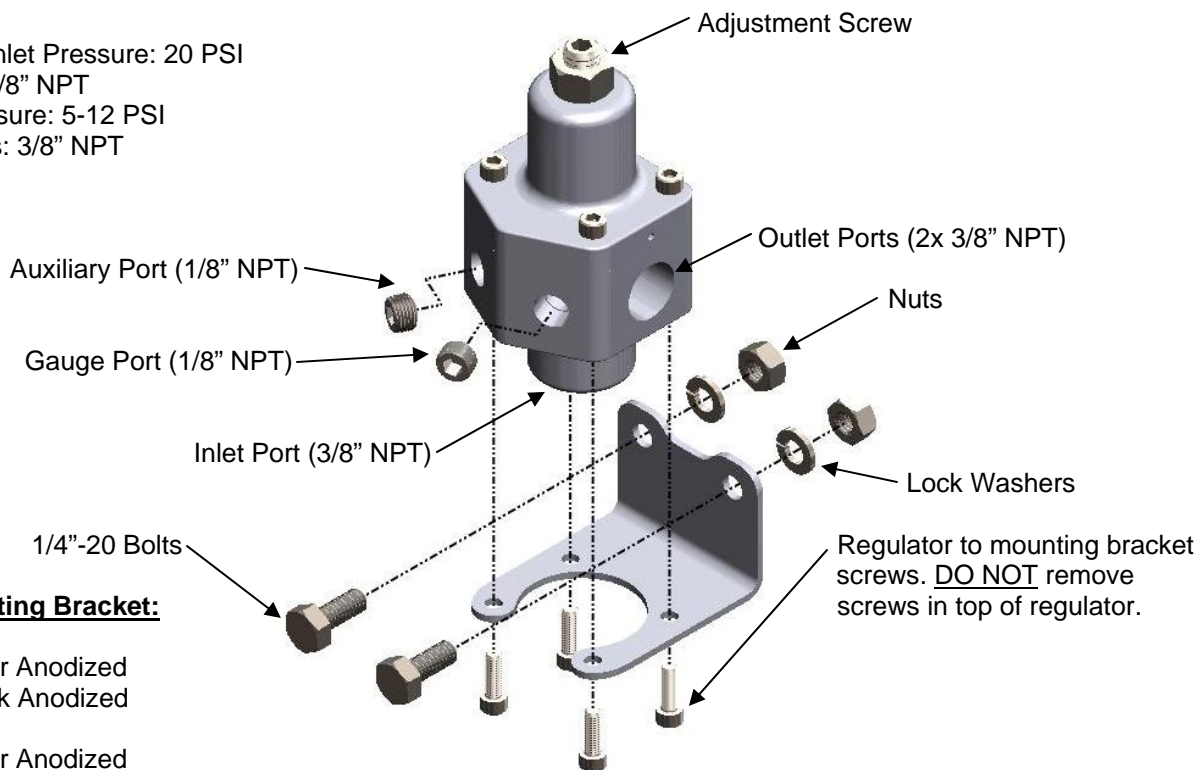

Optional Mounting Bracket:

4150

555-15283 Clear Anodized

555-15288 Black Anodized

4500

555-15293 Clear Anodized

555-15298 Black Anodized



1-800-345-4545 jeps.com