

Installation Instructions for 40065, 40066 & 40067 Ford V8 Distributor

Installation Instructions

These instructions will help you to install a Ford V8 distributor with Mechanical Advance.

Note: This distributor is designed for use with an external CD ignition box (available separately). It will not work without the external CD box since it does not have an ignition control module inside the distributor.

Please read these instructions before installing.

You should always disconnect the battery, negative lead first, before working on the ignition system. When you are done reconnect the battery installing the positive lead first.

Included with the distributor:

- 1 - Machined Ford V8 Distributor
- 1 - Rotor
- 1 - Distributor Cap
- 1 - Wire Retainer with screws
- 1 - Advance Kit
- 1 - Harness
- 1 - Advance lock out kit
- 1 - O-Ring - installed

How to Install the Distributor

1. If the distributor to be replaced has not already been removed from the engine, remove its cap. Do not remove the spark plug wires at this time.
2. Crank the engine slowly until the rotor blade aims at a fixed point on the engine or firewall. Note this point for future reference.
3. Unplug all external connectors coming from the distributor.
4. Now put the existing cap back on and note and mark which spark plug wire the rotor (blade) is pointing at. Then number the wires according to cylinder and remove the wires. If in doubt you can leave the wires connected to the old cap and transfer them to the new cap and distributor later in the process (see point # 9).
5. Loosen and remove the distributor hold-down bolt and clamp. Lift the old distributor out. At this point the rotor may spin and move from its position. This is because of the distributor gear.
6. Lower the new distributor into position. The rotor should be aimed at the same fixed point as was the rotor from the old distributor. After the new distributor has been lowered into place, you may find that it hasn't seated firmly against the intake manifold. This indicates that the lower end of the distributor shaft is not properly aligned with the oil pump drive rod. Do not attempt to force the distributor into position.
7. Install the gasket using plenty of the supplied lubricant.
8. Reinstall the hold-down clamp and thread the bolt just enough to exert a very slight pressure against the distributor. If the distributor was not firmly seated, manually rotate the engine until the distributor drops down into place.
9. With the distributor properly seated, tighten the hold-down bolt just enough so that the distributor is held in place, but can still be rotated with a little effort.
10. Remove the plug wires one at a time from the old cap and install them in the corresponding positions of the new cap. After all wires have been transferred, verify that the wire in the terminal post that is aligned with the rotor leads to number one cylinder. If you are unsure of cylinder number position or firing order, this information can be found in the service manual that covers your particular engine. Put on the distributor cap.
11. Reconnect the wiring lead from the distributor to the ignition switch. At this time you can begin timing.



1-800-345-4545 jegs.com

ADVANCE CURVE - Spring selection

This distributor comes with the blue medium tension springs installed. In the included advance parts kit you received two sets of optional tension springs. The silver-metallic springs are heavy tension and the light silver springs are light tension. The springs can be used in sets or mixed depending on the advance curve you desire.

To change the springs you will need needle nose pliers. First remove the distributor cap and rotor. You will find the springs under the rotor. Take the needle nose pliers and carefully lift the springs off their posts (so you can reuse them if needed). When installing the new springs make sure that the eyelet of the spring sits completely in the groove on the post.

ADVANCE BUSHINGS

There are 3 different advance bushings included in the hardware package. The distributor comes with a blue 21° bushing already installed. If a different degree of advance is desired, follow the procedures to change the bushings.



How to set up the ADVANCE BUSHINGS

- Remove the distributor cap and rotor.
- Remove the locknut and washer on the bottom of the advance assembly.
- Remove the bushing and install the new one.
- Install the washer and locknut.

How to set up the Mechanical Advance LOCK OUT

1. Remove the advance components including the springs, weights and the advance stop bushing from the advance assembly.
2. Remove the roll-pin from the drive gear and remove the gear from the shaft.
3. Slide the shaft two inches out of the housing.
4. Rotate the shaft 180° and insert the advance stop bushing pin into the small hole on the advance plate.
5. Install the locknut and washer to the advance stop bushing pin. This locks the advance in place.
6. Install the drive gear and roll-pin.

Wiring – Mechanical Advance 2-wire distributors

A high performance ignition system, such as a digital CD Ignitions, must be installed with these distributors. Please refer to the instructions, included with the ignition control box, for wiring connections utilizing a 2-wire magnetic pick up.

- Black Wire with Orange Tracer = Positive (+)
- Black Wire with Violet Tracer = Negative (-)



1-800-345-4545 jeps.com