

Installation Instructions for 41375 Adjustable Oil Pressure Light Kit

Instructions:

1. Install indicator light next to its prospective gauge by drilling 3/4" hole.
2. Install the supplied brass "T" fitting onto the back of your oil pressure gauge (not included) or oil pressure port on engine. Install the oil pressure sender into the brass "T".
3. Run a wire from the ignition switch or dash lights to one side of the indicator light. Run another wire from the other side of the light to the "NC" side of the pressure sender. Run another wire from the "C" side of the pressure sender to ground. Whenever the ignition switch is on and the pressure is below the set point of the sender, the light will come on and warn you.
4. To adjust the pressure carefully remove the rubber plug and adjust with either a 5.5mm or 7/32" Allen wrench. Turn clockwise to increase the pressure when the switch will activate. Turn counter-clockwise to decrease the pressure when the switch will activate. For reference: 1/4 turn clockwise will increase switch psi by approximately 1 pound.



1-800-345-4545 jeps.com